


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

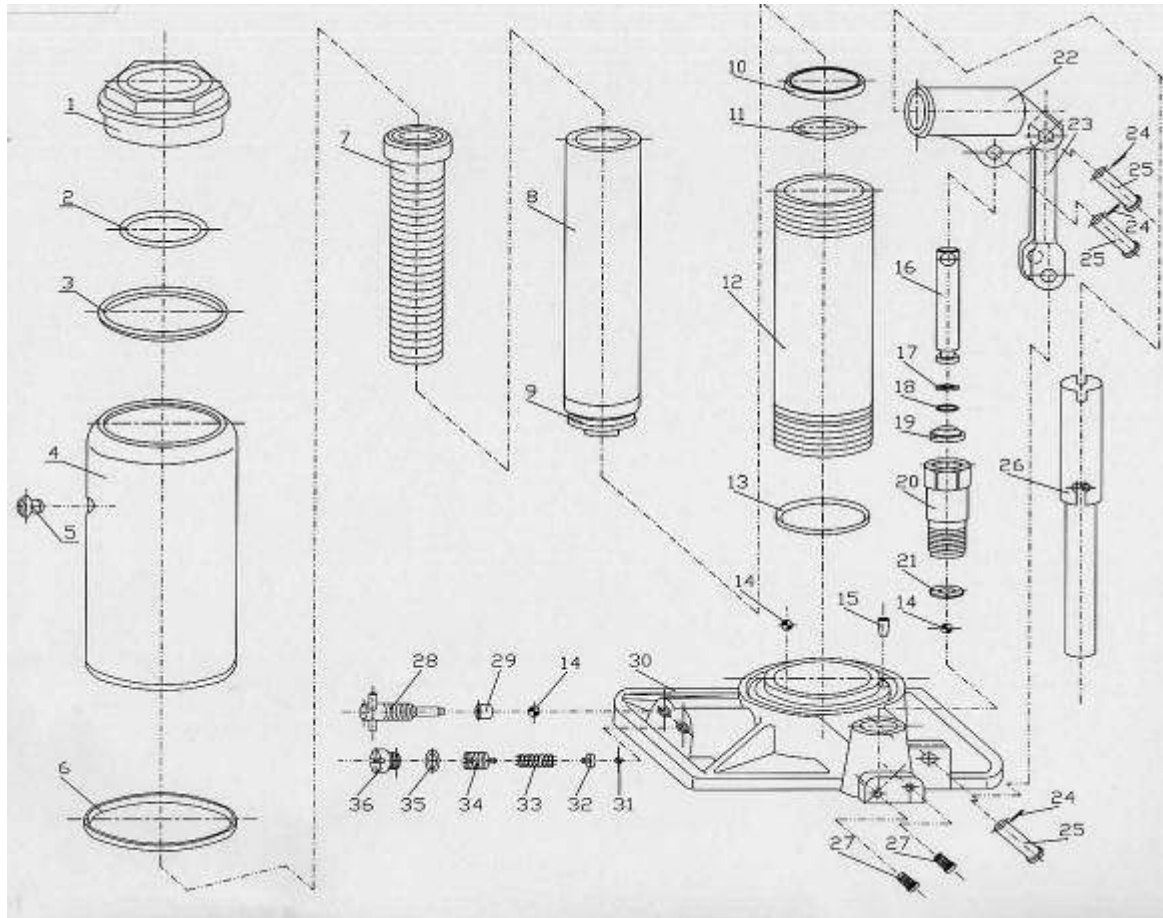

Y411200

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y411200-01	Top Nut	19	Y411200-19	Dust Wiper
2	Y411200-02	O-Ring	20	Y411200-20	Pump Cylinder
3	Y411200-03	Nylon Gasket	21	Y411200-21	Copper Gasket
4	Y411200-04	Oil Tank	22	Y411200-22	Handle Socket
5	Y411200-05	Oil Plug	23	Y411200-23	Linkage
6	Y411200-06	Square Seal	24	Y411200-24	Cotter Pin
7	Y411200-07	Extension Screw	25	Y411200-25	Axle
8	Y411200-08	Ram	26	Y411200-26	Handle Assembly
9	Y411200-09	Piston	27	Y411200-27	Oil Stopper
10	Y411200-10	U-cup Ring	28	Y411200-28	Release Valve
11	Y411200-11	O-Ring	29	Y411200-29	Square Seal
12	Y411200-12	Cylinder	30	Y411200-30	Base
13	Y411200-13	Square Seal	31	Y411200-31	Steel Ball
14	Y411200-14	Steel Ball	32	Y411200-32	Stud
15	Y411200-15	Dust Wiper	33	Y411200-33	Compression Spring
16	Y411200-16	Pump Plunger	34	Y411200-34	Pressure Screw
17	Y411200-17	Snap Ring	35	Y411200-35	O-Ring
18	Y411200-18	O Ring	36	Y411200-36	Safety Screw
			*	Y411200-RK	Repair Kit